
SLOPE SURFACE SHALL BE SMOOTH BEFORE PLACEMENT FOR PROPER SOIL CONTACT.

IF THERE IS A BERM AT THE TOP OF SLOPE, ANCHOR UPSLOPE OF THE BERM.

STAPLE AT 12" INTERVALS.

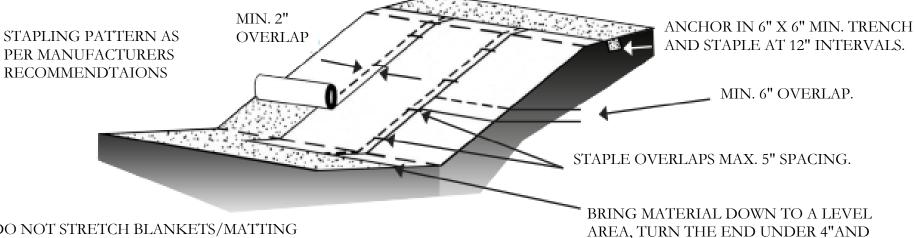

DO NOT STRETCH BLANKETS/MATTING TIGHT-ALLOW THE ROLLS TO CONFORM TO ANY IRREGULARITIES.

FOR SLOPES LESS THAN 3H:1V, ROLLS MAY BE PLACED IN HORIZONTAL STRIPS.

LIME, FERTILIZE, AND SEED BEFORE INSTALLATION. PLANTING OF SHRUBS, TREES, ETC. SHOULD OCCUR AFTER INSTALLATION.

## **MAINTENANCE NOTES:**

- 1) INSPECT MATTING WEEKLY AND AFTER SIGNIFICANT RAIN EVENTS. REPAIR IMMEDIATELY.
- 2) GOOD CONTACT WITH GROUND MUST BE MAINTAINED, AND EROSION MUST NOT OCCUR BENEATH MATTING. REPAIR AND SECURE AS REQUIRED IF DAMAGED OR UNDERCUT.
- 3) MONITOR AND REPAIR AS NECESSARY UNTIL GROUNDCOVER IS ESTABLISHED.



## STANDARD MATTING INSTALLATION (SLOPES)

DETAIL NUMBER

**2018-010A** SHEET 1 of 1