


MAINTENANCE NOTES:

- 1) INSPECT MATTING WEEKLY AND AFTER SIGNIFICANT RAIN EVENTS. REPAIR IMMEDIATELY.
- 2) GOOD CONTACT WITH GROUND MUST BE MAINTAINED, AND EROSION MUST NOT OCCUR BENEATH MATTING. REPAIR AND SECURE AS REQUIRED IF DAMAGED OR UNDERCUT.
- 3) MONITOR AND REPAIR AS NECESSARY UNTIL GROUND COVER IS ESTABLISHED.

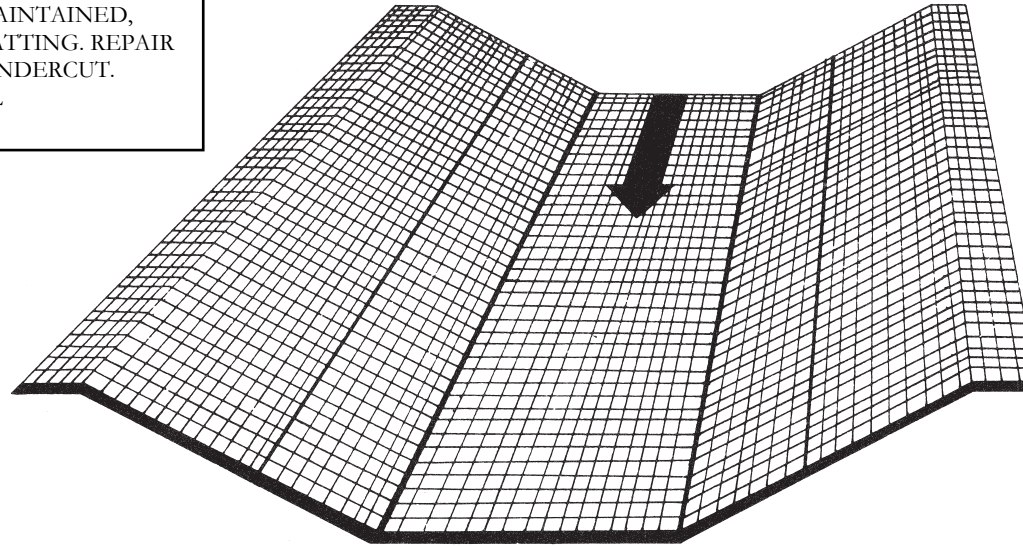


STAPLE/STAKE AT 12" INTERVALS. STAPLING/STAKING PATTERN AS PER MANUFACTURERS SPECIFICATIONS.

WHEN USED IN CONJUNCTION WITH CHECK DAMS OR WATTLES, INSTALL MATTING FIRST.

LIME, FERTILIZE, AND SEED BEFORE INSTALLATION.


MATTING SHOULD BE USED IN ALL DITCHES AND ANYWHERE CONCENTRATED RUNOFF IS CONVEYED.

IN CHANNELS, ROLL OUT STRIPS OF NETTING PARALLEL TO THE DIRECTION OF FLOW AND OVER THE PROTECTIVE MULCH.

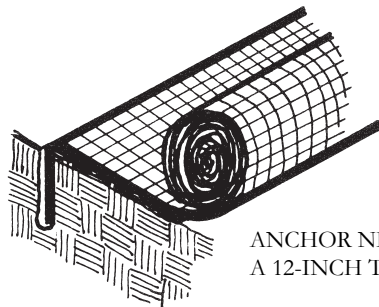

ANCHOR NETTING IN A 12-INCH TRENCH

APPLY MATTING TO BOTTOM AND SIDESLOPES OF DITCH. MATTING MUST BE INSTALLED UP TO AND OVER CREST OF SIDESLOPES, AND ANCHORED IN A TRENCH AS SHOWN ABOVE.

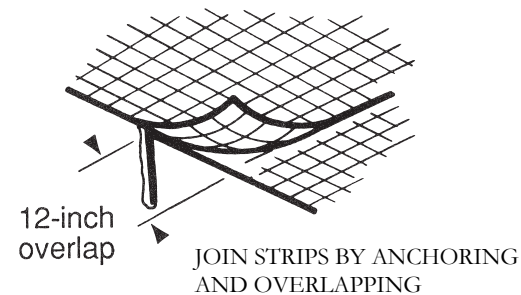

12-inch overlap

JOIN STRIPS BY ANCHORING AND OVERLAPPING



STANDARD MATTING INSTALLATION

DETAIL NUMBER

2018-010
SHEET 1 of 1